




INSTALLATION INSTRUCTIONS



WIRELESS OUTDOOR DETECTOR

FTN-RRHW/FTN-RR2G/FTN-RRDS

FTN-RRHW	Honeywell 5800 Series Compatible
FTN-RRDS	DSC 433MHz Compatible

FTN-RR2G	2GIG Compatible
----------	-----------------

Product is not produced by, endorsed by, nor is officially associated with Honeywell, 2GIG, or DSC.

FEATURES

- Narrow Angle Detection
- Detection Range Adjustability (2m / 5m)
- Intelligent 'AND' logic
- Horizontal Adjustability
- Tamper Output

Install in accordance with the Standard for Installation and Classification of Burglar and Holdup Alarm Systems, UL 681.

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference that may be received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the Resolution Products, Inc. could void the user's authority to operate this equipment.

IC NOTICE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux cnr d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

"Honeywell", "2GIG", "Interlogix", "DSC" are trademarks owned by Honeywell International, Inc, Nortek Security & Control LLC, United Technologies Corporation, and Tyco Safety Products Canada LTD, respectively.

OPTEX Inc. products will function with one of either Honeywell, 2GIG, Interlogix, or DSC systems. However, no OPTEX Inc. product is produced by, endorsed by, nor is officially associated with Honeywell, 2GIG, Interlogix, DSC.





OPTEX Inc. recommends verifying proper enrollment and operation, per control panel installation instructions, at installation.

CONTENTS

1	INTRODUCTION	
1-1	BEFORE INSTALLATION	2
1-2	ZONE CONFIGURATION	3
1-3	PARTS IDENTIFICATION	3
1-4	DETECTION AREA	4
2	INSTALLATION	
2-1	WIRING DIAGRAM	4
2-2	ENROLLING TO PANEL	5
2-3	MOUNTING	9
3	WALK TEST	
3-1	WALK TEST	12
4	DIP SWITCH SETTING	
4-1	WALK TEST MODE	12
4-2	BATTERY SAVING TIMER	13
4-3	ALARM & TROUBLE OUTPUT	13
4-4	LED	13
4-5	PIR SENSITIVITY	13
5	OTHERS	
5-1	LED LIGHT PATTERN	14
6	BATTERY	
6-1	HOW TO REPLACE BATTERY	15
6-2	BATTERY LIFE	15
7	SPECIFICATIONS	
7-1	SPECIFICATIONS	16
7-2	DIMENSIONS	16






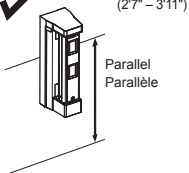
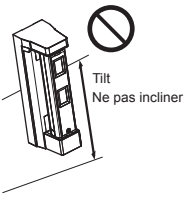
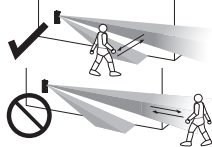
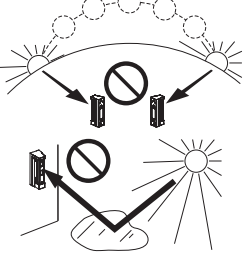
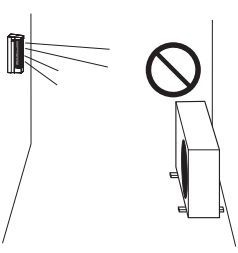
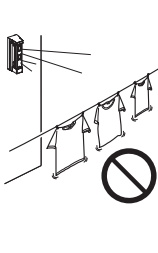
1 INTRODUCTION

1-1 BEFORE INSTALLATION

 Warning	Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.
 Caution	Failure to follow the instructions provided with this indication and improper handling may cause injury and/or property damage.
 Avertissement	Le non respect des instructions données avec ce signe et une mauvaise manipulation peuvent causer la mort ou des blessures graves.
 Attention	Le non respect des instructions données avec ce signe et une mauvaise manipulation peuvent causer des blessures et/ou des dommages aux biens.

The check  mark indicates recommendation. The nix  sign indicates prohibition.

Le signe de coche  indique une recommandation. Le signe de négation  indique une interdiction.

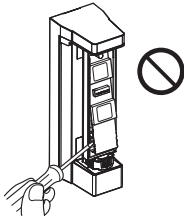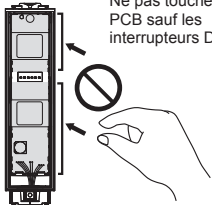
 Warning/Avertissement	 Caution/Attention	
<p>Do not remove the PCB. Ne pas enlever le PCB.</p> 	<p>Do not touch the PCB except for the DIP switch. Ne pas toucher le PCB sauf les interrupteurs DIP.</p> 	
<p>Mounting height. Hauteur de montage.</p> <p> 0.8 – 1.2 m (2'7" – 3'11")</p> <p> Parallel Parallèle</p>	<p>Keep the detector parallel to the ground. Maintenir le détecteur parallèle au sol.</p> <p> Tilt Ne pas incliner</p>	<p>Consider the direction a person is approaching from, as well as the detection area. Tenir compte de la direction d'approche d'une personne de même que de la zone de détection.</p> 
<p>Install the detector in a place where it is free from false alarm factors. For example: Installer le détecteur dans un emplacement ne présentant pas de cause de fausses alarmes. Par exemple :</p>		
<ul style="list-style-type: none"> • Direct Sunlight and reflection • Lumière solaire et réflexion 	<ul style="list-style-type: none"> • Heat source • Source de chaleur 	<ul style="list-style-type: none"> • Objects moving in the wind • Objets bougeant au vent 

1-2 ZONE CONFIGURATION SUGGESTIONS

Set up "FITLINK" according to location as desired. Below are zone configurations for typical location types.

Location	Alarm Output			Panel Event	Chime	Report to CMS	
	Disarm	Away	Stay			Alarm	Trouble
Front Porch; Backyard Carport; Gate Entrance; Deck	No	No	No	Yes	Toggle On or Off	No	Yes
Crawl Space; Basement; Storage Shed;	No	Instant Alarm	Instant Alarm	Yes	On during disarm	Yes	Yes
Garage or Sliding Glass Door; Screened in Porch; Sunroom	No	Entry delay 2	Entry delay 2	Yes	On during disarm	Yes	Yes
Driveway; Sidewalk; Public Areas	No	No	No	No	Toggle On or Off	No	Yes

1-3 PARTS IDENTIFICATION

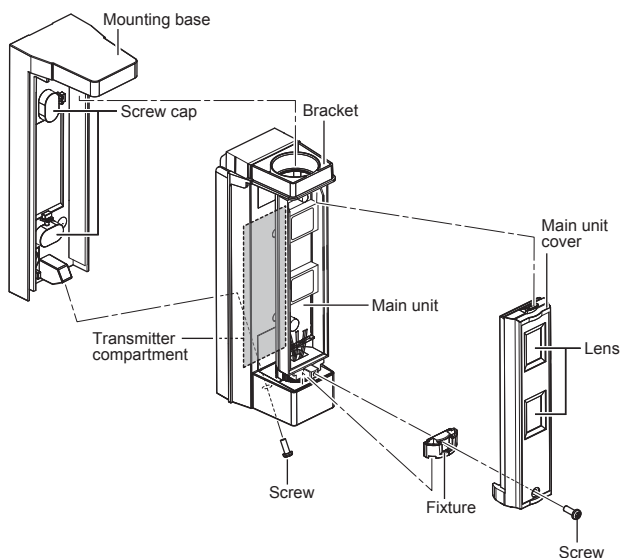

Accessories>>

Screw kit

For wall mounting
Screw (3 × 20 mm)



Note>>

FCC ID


FTN-RRHW: U5X-RE201X
FTN-RR2G: U5X-RE201X
FTN-RRDS: U5X-RE301

IC ID

FTN-RRHW: 8310A-RE201
FTN-RR2G: 8310A-RE201
FTN-RRDS: 8310A-RE301


1-4 DETECTION AREA

Top view

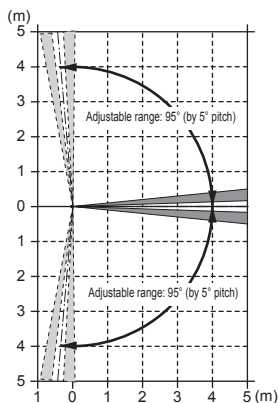


Side view

5 m detection length

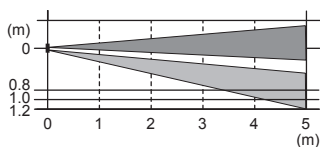


2 m detection length

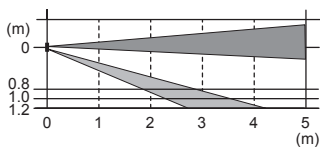

2 INSTALLATION

2-1 WIRING DIAGRAM

- Overall wiring diagram

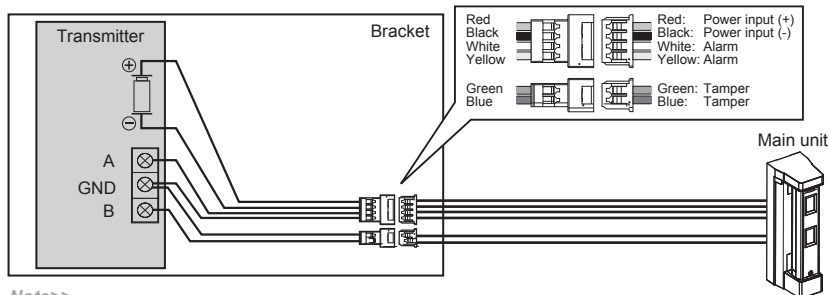

Note>>

- The battery in the transmitter is shared with the detector.
- Connection for TROUBLE is used when monitoring for Tamper.

2-2 ENROLLING TO CONTROL PANEL

Enrolling to Honeywell LYNX Touch L5210/L7000 Series

1. Place the panel into wireless enrollment mode and then trip the tamper three times.
2. Set "Loop Number" to 1.
3. Set "Device type" to "Other".
4. Set "Response Type" and "Alarm Report" according to following table.
5. Set "Chime" to your preferred type.
6. Set "Supervision" to "Supervised".

Location	Response Type	Alarm Report
Front Porch; Backyard Carport; Gate Entrance; Deck	Silent Burglary	No
Crawl Space; Basement; Storage Shed	Perimeter	Yes
Garage or Sliding Glass Door; Screened in Porch; Sunroom	Entry Exit 2	Yes
Driveway; Sidewalk; Public Areas	Silent Burglary	No

Enrolling to Honeywell Residential Vista Panels

1. While in program mode, press *56 to enter Zone Programming Menu Mode.
2. Select 0 or 1 to determine if you will "confirm" the sensor after learning it.
3. Enter the zone number that you wish to program (or 00 to exit zone programming). Press [*] to continue.
4. A summary display appears, press [*] to continue.
5. Enter "Zone Type" according to table.
6. Enter "Partition No."
7. Enter "Report codes" according to table.
8. Enter "Input Type" to "3" = RF (supervised RF transmitter).
9. Learn or input transmitters serial number. (To learn FITLINK, trip the tamper three times.)
10. Change "Loop Number" to 1.

Location	Zone Type	Report Codes
Front Porch; Backyard Carport; Gate Entrance; Deck	Type 24 Silent Burglary	00
Crawl Space; Basement; Storage Shed	Type 03 Perimeter Burglary	Other than 00
Garage or Sliding Glass Door; Screened in Porch; Sunroom	Type 02 Entry Exit 2	Other than 00
Driveway; Sidewalk; Public Areas	Type 24 Silent Burglary	00

2-2 ENROLLING TO CONTROL PANEL

Enrolling to 2GIG GC2/GC3

1. Select "RF Sensor #" (01 to 48).
2. Select "Sensor Type" according the following table.
3. Select "Sensor Equipment Code" as "[0000] Other or [0609] Existing Motion Detector".
4. Select "Sensor Other Equip code as "[0]" (this menu only appears if [0000] Other was selected in the previous menu.
5. At the "Sensor Serial Number" menu, press shift, then press Learn, and then trip detector tamper switch.
6. Select "Equipment Age" as "New".
7. Select "Loop Number " as "Loop 1".
8. Select "Dialer Delay" as "Enabled".
9. Edit "Voice Descriptor" according to location.
10. Select "Sensor Reports" according to following table.
11. Select "Sensor Supervised" to "Enabled".
12. Select the desired chime.

Location	Sensor Type	Sensor Reports
Front Porch; Backyard Carport; Gate Entrance; Deck	(23) No Response Type	No
Crawl Space; Basement; Storage Shed	(03) Perimeter	Yes
Garage or Sliding Glass Door; Screened in Porch; Sunroom	(02) Exit/Entry 2	Yes
Driveway; Sidewalk; Public Areas	(23) No Response Type	No

2-2 ENROLLING TO CONTROL PANEL


Enrolling to DSC PowerSeries

1. Put control panel into learn sensor mode.
2. Push tamper switch to enroll FITLINK.
3. Press [*] key to confirm ID.
4. Enter [zone #].
5. Enter [zone type] according to the following table.
6. Press the tamper again to "Activate the Device for Test".
7. Set "Zone Attributes" according to following table.


Location	Zone Types	Zone Attributes
Front Porch; Backyard Carport; Gate Entrance; Deck	24-hour Non-Alarm	Set "Chime" ON or OFF
Crawl Space; Basement; Storage Shed	Instant	Keep as defaults
Garage or Sliding Glass Door; Screened in Porch; Sunroom	Delay 2	Keep as defaults
Driveway; Sidewalk; Public Areas	24-Hour Non-Alarm	Set "Chime" ON or OFF

2-3 MOUNTING


1 Remove the mounting base.

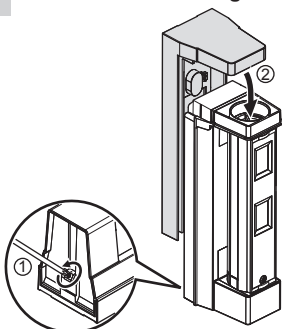

2 Open the knockout.

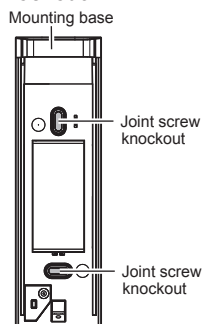

3 Mount the mounting base on the wall.

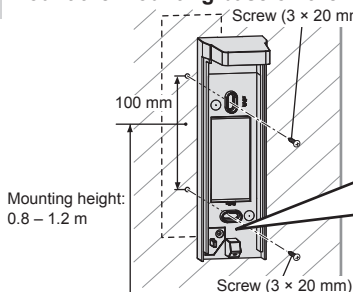


Use this knockout screw hole to mount the base, when making the wall tamper switch effective. If the main unit is peeled off from a wall, this plastic part will be cracked and remain on a wall, activating the tamper switch.


Note>>

- Transmitter needs to be enrolled to receiver before installing the detector.

4 Attach the bracket and main section.

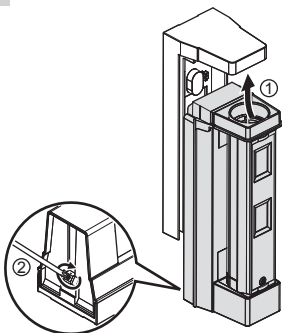

5 Open the main unit cover

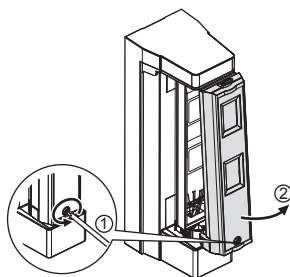


Note>>

- Be sure to set the screw cap after installing the mounting base.

6 Determine the horizontal detection angle and attach the fixture.

Note>>

- To make adjustments, remove the fixture.

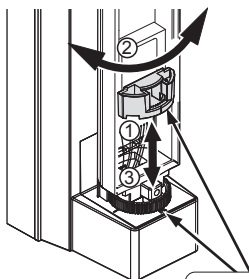


Note>>

- Check that the fixture and bracket engage correctly.




Notes>>


- Align the detection area parallel to the wall to reduce interference with the wall.

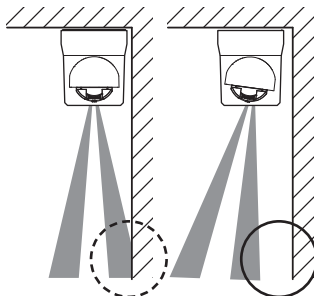



- When the unit is mounted on the corner to look ahead along the wall, choose the guide-mark located on the opposite side of the wall.

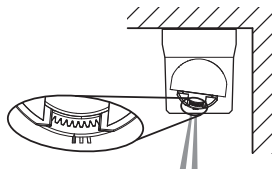

- When the unit is mounted on the wall and the detection pattern is at 90 degrees, choose the corresponding engraved guide mark.

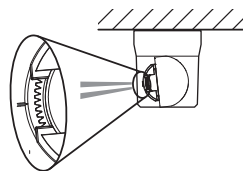

8 Determine the detection length. (2 m or 5 m)

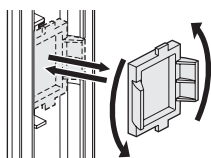


If 2 m is required, rotate the lower lens 180 degrees.

Note>>

- Do not remove the upper lens.


5 m detection length (Factory default)

Side view

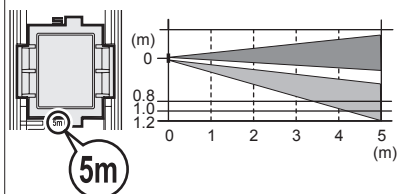


2 m detection length

Side view

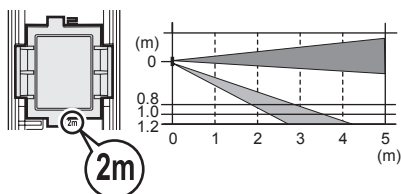


9 Attach the fixture.

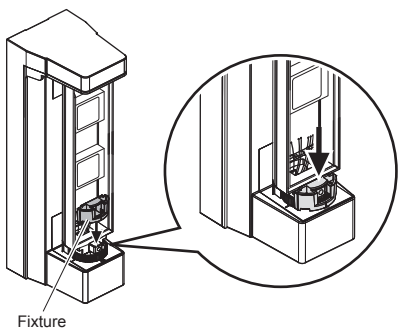

Fixture


10 Attach the main unit cover.

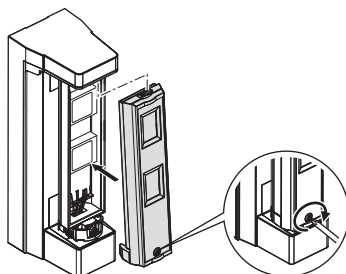

Note>>

- To prepare for walk test, check that DIPswitch 1 (WALKTEST MODE) is set to "ON (TEST)" before attaching main unit cover.

11 Perform walk test. For details, refer to 3-1.

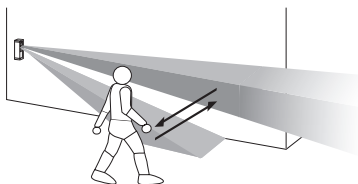

12 After walk test is complete, set DIP switch 1 (WALK TEST MODE) from "ON" to "OFF".


Note>>

- The battery life will be shortened unless the DIP switch 1 is set to "OFF".

3 WALK TEST

3-1 WALK TEST


- 1 Set the DIP switch 1 (WALK TEST MODE) to "ON (TEST)".

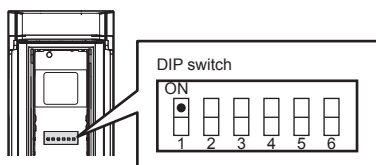


Note>>

- The switch is set to "ON (TEST)" by factory default.

- 2 Check that LED lights for 2 seconds when the intended object is detected.

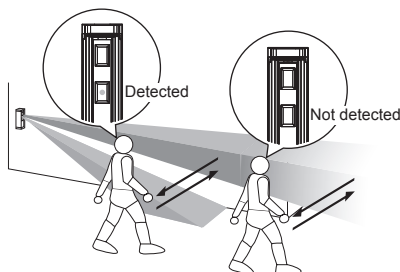



- 3 Set the DIP switch 1 (WALK TEST MODE) to "OFF (NORM)".

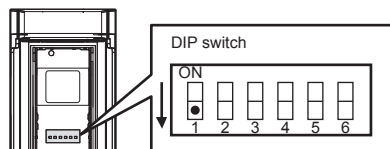

Notes>>


- The battery life will be shortened unless the DIP switch 1 is set to "OFF".
- To use the LED in normal operating condition, set the DIP switch 4 to "ON".

4 DIP SWITCH SETTING

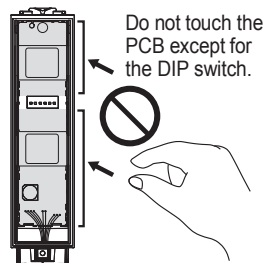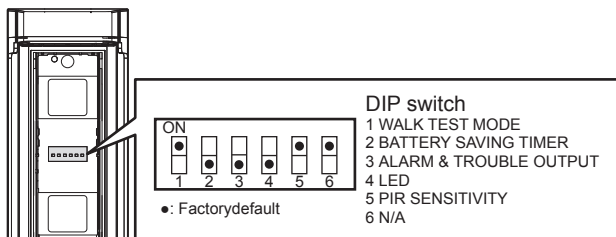

4-1 WALK TEST MODE

DIP switch 1




TEST
↕
NORM

Position	Function
TEST (Factory default)	<ul style="list-style-type: none"> • The LED lights irrespective of the DIP switch 4 (LED) setting. • The DIP switch 2 (BATTERY SAVING TIMER) setting is inactive.
NORM	<ul style="list-style-type: none"> • The LED lights depending on the DIP switch 4 (LED) setting. • The DIP switch 2 (BATTERY SAVING TIMER) setting is active.

4-2 BATTERY SAVING TIMER

DIP switch 2




Note>>

- The detector will not generate alarms at intervals shorter than the specified time.

Position	Function
5S	5 sec.
120S (Factory default)	120 sec.

4-3 ALARM & TROUBLE OUTPUT


DIP switch 3



Position	Function
N.O.	N.O. output
N.C. (Factory default)	N.C. output

4-4 LED


DIP switch 4



Position	Function
ON	LED ON
OFF (Factory default)	LED OFF <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> Note>> <ul style="list-style-type: none"> If the LED lights, check the DIP switch 1 (WALKTEST MODE) setting. </div>

4-5 PIR SENSITIVITY

DIP switch 5








Position	Function
STD (Factory default)	Normal sensitivity
LOW	Low sensitivity

5 OTHERS

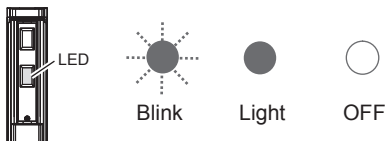5-1 LED LIGHT PATTERN

The following explains the LED light pattern.




Detector condition	LED indicator
Warm-up Note>> <ul style="list-style-type: none">• The LED blinks even if the DIP switch 4 (LED) is set to "OFF".	 →  Blinks for approx. 120 seconds.
Alarm	 →  Lights for 2 seconds.

6 BATTERY


The detector shares the battery with the transmitter.

6-1 HOW TO REPLACE BATTERY


- 1** Remove the bracket and main section.

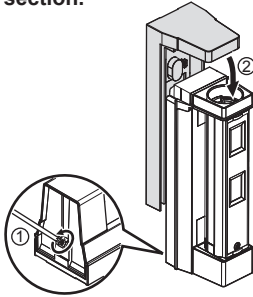

- 2** Replace the battery.

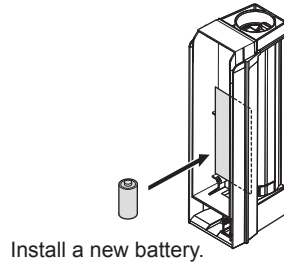

- 3** Attach the bracket and main section.

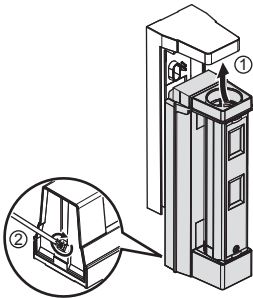

6-2 BATTERY LIFE

The values indicated are only for reference on each condition.
The sensor will send low battery transmissions to the control panel.

CR123A (3 V, 1300 mAh)

Alarm trigger per day	Battery Life
150	Approx. 5 years
500	Approx. 2 years


7 SPECIFICATIONS

7-1 SPECIFICATIONS

Model	FTN-RRHW	FTN-RR2G	FTN-RRDS
Detection method	Passive infrared		
PIR coverage	16'5" × 3'3" (5 × 1 m)		
Detection length limit	6'7", 16'5" (2 m, 5 m)		
Detection width	3'3" wide at 16'5" / 24" wide at 6'7"		
Detectable speed	1' – 4'11"/s (0.3 – 1.5 m/s)		
Sensitivity	3.6°F (at 2'/s) (2.0°C (at 0.6 m/s))		
Power source	CR123A Lithium battery		
Current draw	11.2μA standby / 23mA max. at 3 V DC		
Alarm period	2.0 ±1.0 sec.		
Warm-up period	Approx. 120 sec. (LED blinks)		
Alarm output	N.C./N.O. Selectable-Solid State Switch 10 V DC 0.01 A (max.)		
Trouble output	N.C./N.O. Selectable-Solid State Switch 10 V DC 0.01 A (max.)		
LED indicator	Enable: During DIP switch 1 (WALK TEST MODE) or DIP switch 4 (LED) ON Disable: During normal operation Light/Blink: Warm-up, alarm		
RF Interference	No alarm 10 V/m		
Operation temperature	-4 to +140°F (-20 to +60°C)		
Environment humidity	95% max.		
Weatherproof	IP55		
Mounting	Wall (Outdoor, Indoor)		
Mounting height	2'7" to 3'11" (0.8 to 1.2 m)		
Weight	6.4 oz. (180g) without wireless transmitter and battery		
Accessories	screw (3 × 20 mm) × 2		

*Specifications and design are subject to change without prior notice.

7-2 DIMENSIONS

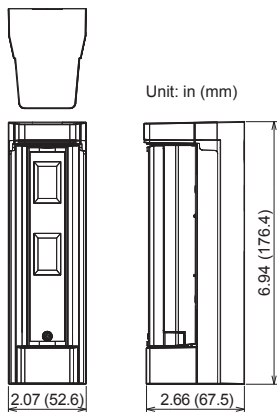

NOTE

These units are designed to detect an intruder and activate an alarm control panel.
 Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

For programming technical support: 877-260-5578
 For OPTEX support: 800-966-7839
support@optexamerica.com
www.optexamerica.com



OPTEX

OPTEX CO., LTD.(JAPAN)

URL: <http://www.optex.net>

OPTEX INC. (U.S.)
 URL: <http://www.optexamerica.com>

OPTEX DO BRASIL LTDA. (Brazil)
 URL: <http://www.optex.net/br/es/sec>

OPTEX (EUROPE) LTD. / EMEA HQ (U.K.)
 URL: <http://www.optex-europe.com>

OPTEX TECHNOLOGIES B.V. (The Netherlands)
 URL: <http://www.optex.eu>

OPTEX SECURITY SAS (France)
 URL: <http://www.optex-security.com>

OPTEX SECURITY Sp.z o.o. (Poland)
 URL: <http://www.optex.com.pl>

OPTEX PINNACLE INDIA, PVT., LTD. (India)
 URL: <http://www.optex.net/in/en/sec>

OPTEX KOREA CO.,LTD. (Korea)
 URL: <http://www.optexkorea.com>

OPTEX (DONGGUAN) CO.,LTD. SHANGHAI OFFICE (China)
 URL: <http://www.optexchina.com>

OPTEX (Thailand) CO., LTD. (Thailand)
 URL: <http://www.optex.net/th/th>

Copyright (C) 2017 OPTEX CO.,LTD.